


# **Stamp Legibility**

# 4 Parts of the ISPM 15 Mark

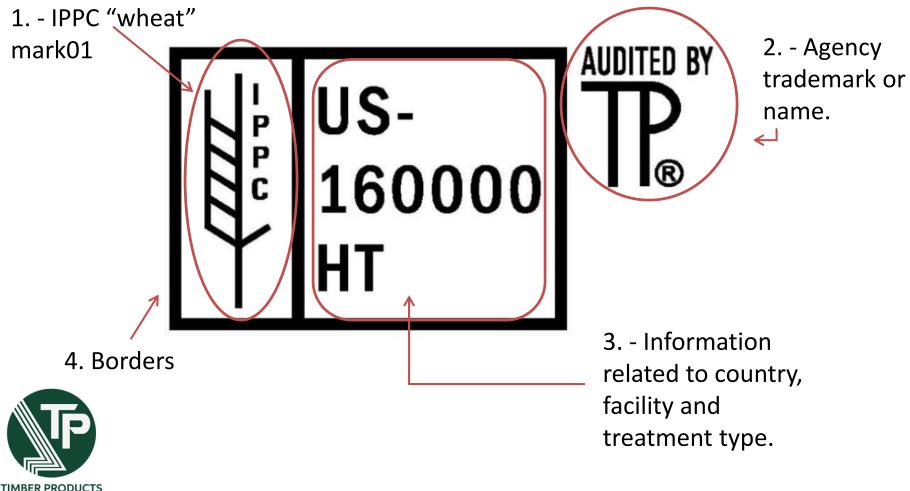

FIMBER PRODUCTS We Deliver Confidence.

#### Regardless of the mark type, all parts of the mark must be fully present to be considered legible.

What causes stamp illegibility?

- 1. Worn out stamps.
- 2. Dirty stamps.
- 3. Extremely rough or uneven wood.
- 4. Other irregularities (i.e. grub holes, ant burrows, bark, etc.).
- 5. Too much ink.
- 6. Too little ink.
- 7. Human error.






This mark is considered legible.

<u>ALL</u> parts are legible and complete.

This includes:

- 1. "IPPC" LOGO
- 2. US 16000 HT
- 3. "TP" LOGO
- 4. BORDERS



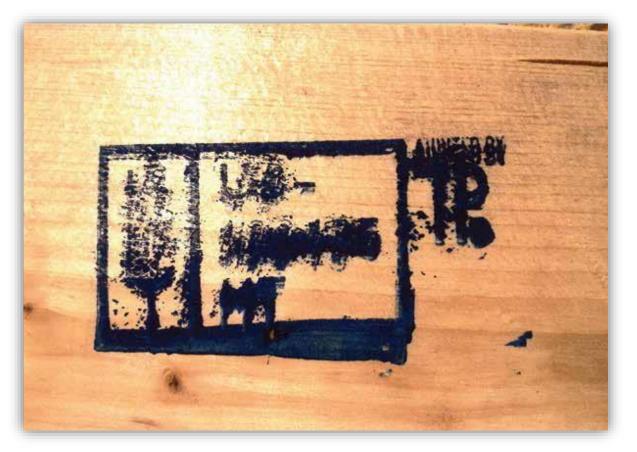



There are **NO** parts of this stamp that are readable.





This mark was applied with to little ink and not fully readable.





This stamp was not fully pressed to the wood causing part of the mark to be missing and incomplete.





This mark was applied where a grub hole is present making the mark incomplete.






To much ink on the stamp has caused part of this mark to be unreadable.






An uneven area where the wood was stamped caused part of the wheat symbol and border to be missing and is incomplete.

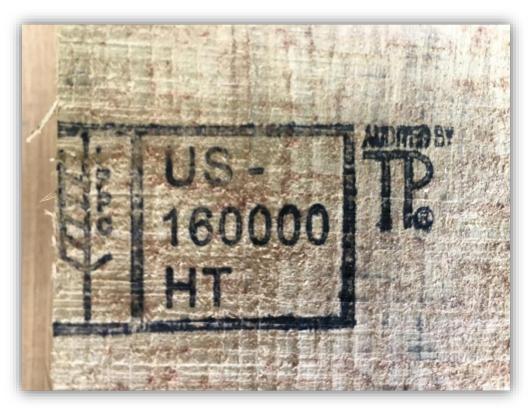



This mark was applied close at the edge of the wood and the left border is missing making it incomplete.

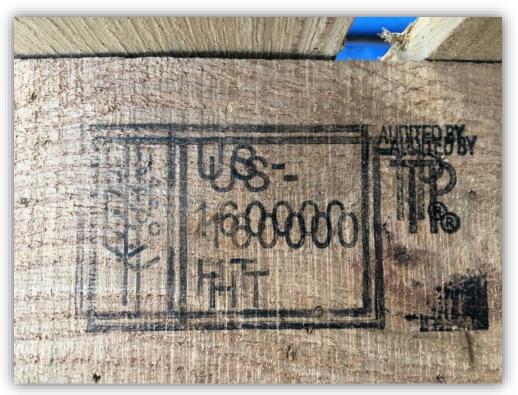



Re-stamping over an illegible mark causes both marks to be unreadable and therefore illegible.






This mark was applied where a grub hole is present making the mark incomplete.





This mark was applied in an area where the wood is uneven and pith is present making the mark incomplete.

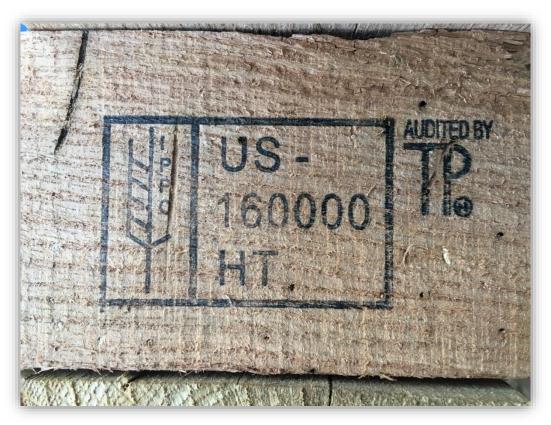



# Remember all parts of the stamp must be legible & complete.



# **STAMP LEGIBILTY**

Please contact your inspector or the TP office with any questions related to stamp legibility.